


# CUSTOMWEON<sup>®</sup>

## INSTALLATION GUIDE: HANGING WIRE KIT


STAGE 1

### INSERT AND TRIM WIRES

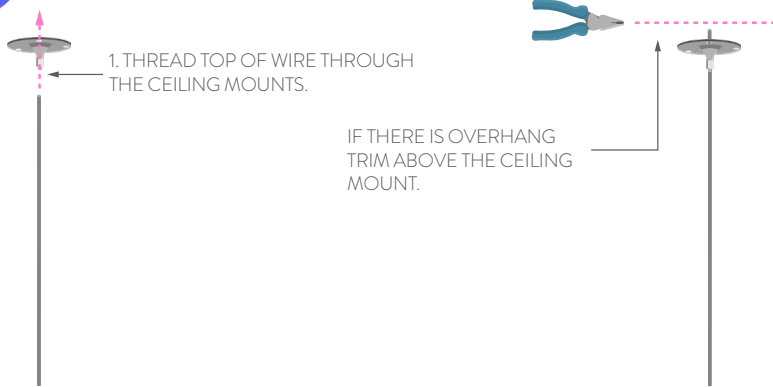


STAGE 2

### MEASURE AND DRILL MOUNTS

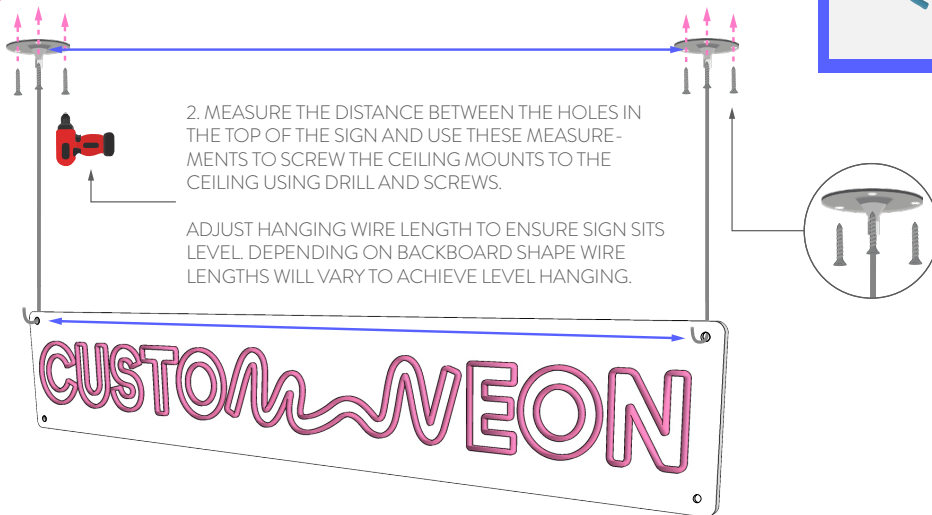



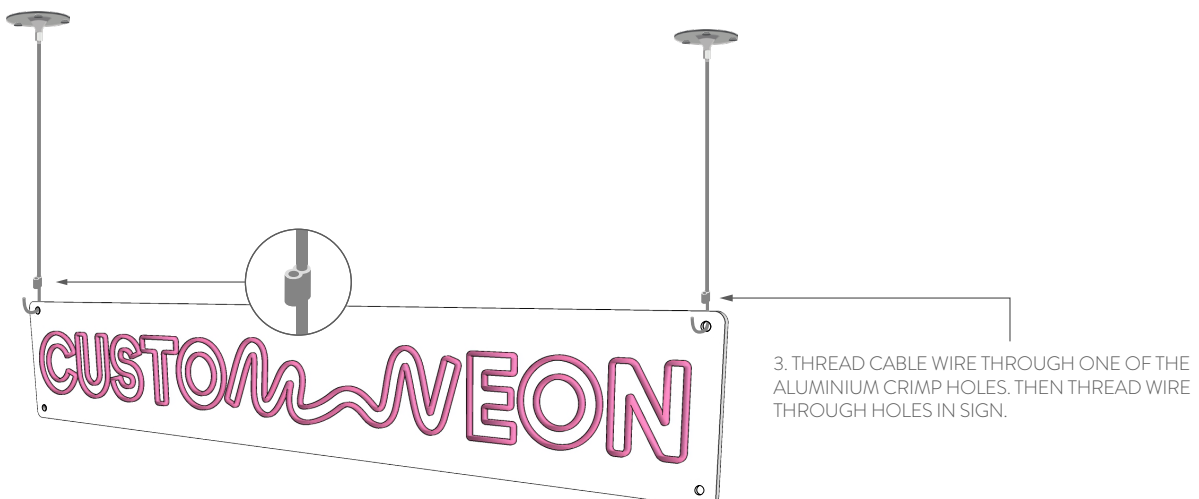

STAGE 3




### INSERT CRIMP



#### KIT COMPONENTS


-  **SCREWS**
-  **ALUMINIUM CRIMPS**
-  **CEILING MOUNTS**
-  **CABLE WIRES**

#### WHAT YOU WILL NEED

-  **DRILL**
-  **PENCIL**
-  **PLIERS / SNIPS**

**STAGE 4** CRIMP AND TRIM WIRES

4. THREAD WIRE BACK THROUGH THE OTHER HOLE OF ALUMINIUM CRIMP. ENSURE 1CM OF WIRE REMAINS STICKING OUT.

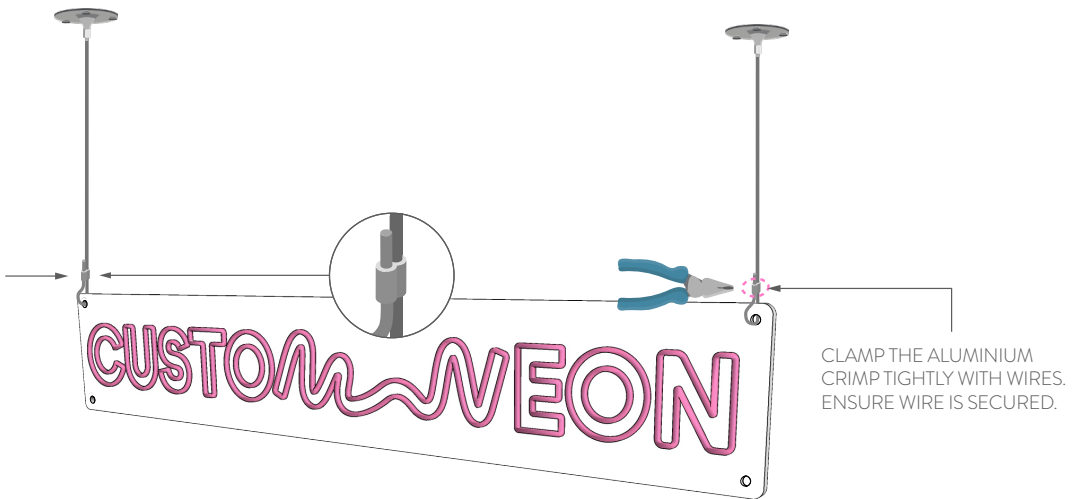

CLAMP THE ALUMINIUM CRIMP TIGHTLY WITH WIRES. ENSURE WIRE IS SECURED.

**STAGE** ADMIRE SIGN

